


Biometric ID Pad replacement instructions

Wall/Flat Mount Installations:

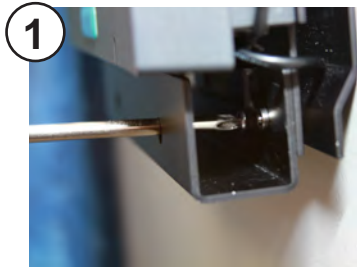

1 Remove 2 screws securing the PC to the bottom of the Base Mount



2 Lift the PC and remove from Base Mount



3 Place the PC face down on a protected/padded surface. Remove 2 screws securing the Cord Guard



4 Remove Cord Guard to gain access to USB connection for the Biometric ID Pad



5 Unplug the USB connection for the Biometric ID Pad



6 Remove 2 screws connecting the Biometric ID Pad to the PC



7 Remove Biometric ID Pad
Attach the replacement ID Pad by reversing the steps above.

Wall / Angle OR Desktop Mount Installations:




1 Remove 2 screws securing the Cord Guard



2 Remove Cord Guard to gain access to USB connection for the Biometric ID Pad



3 Unplug the USB connection for the Biometric ID Pad

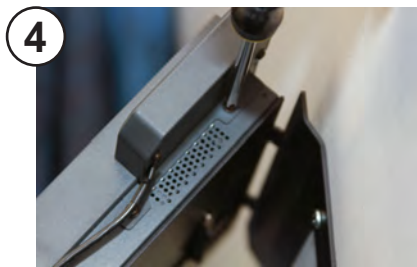

4 Remove 2 screws connecting the Biometric ID Pad to the PC



5 Remove Biometric ID Pad
Attach the replacement ID Pad by reversing the steps above.