Biometric ID Pad Replacement Instructions

Procare SOLUTIONS

WALL/FLAT MOUNT INSTALLATIONS:

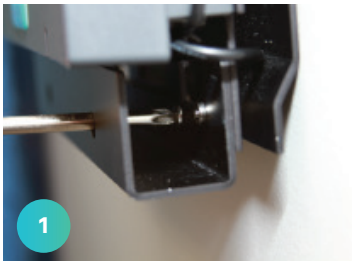

Remove 2 screws securing the PC to the bottom of the Base Mount

Lift the PC and remove from Base Mount

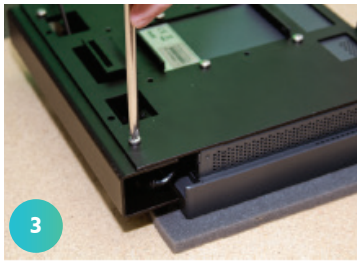

Place the PC face down on a protected/padded surface. Remove 2 screws securing the Cord Guard

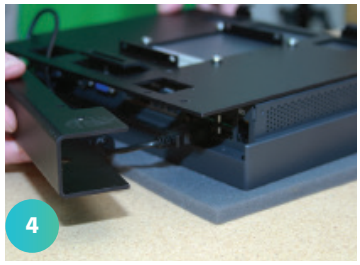

Remove Cord Guard to gain access to USB connection for the Biometric ID Pad

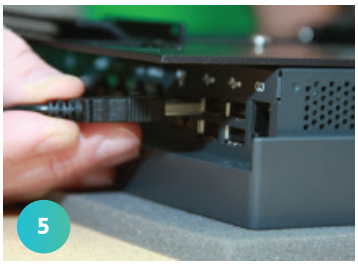

Unplug the USB connection for the Biometric ID Pad

Remove 2 screws connecting the Biometric ID Pad to the PC

Remove Biometric ID Pad. Attach the replacement ID Pad by reversing the steps above

WALL/ANGLE OR DESKTOP MOUNT INSTALLATIONS:

Remove 2 screws securing the Cord Guard

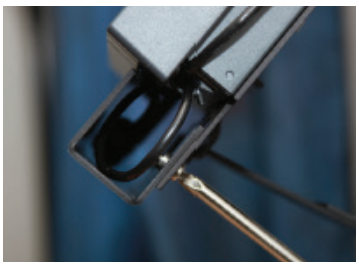

Remove 2 screws securing the Cord Guard (side view)

Remove Cord Guard to gain access to USB connection for the Biometric ID Pad

Unplug the USB connection for the Biometric ID Pad

Remove 2 screws connecting the Biometric ID Pad to the PC

Remove Biometric ID Pad. Attach the replacement ID Pad by reversing the steps above